

# Alienware 17 R4

## Setup and Specifications

**Computer Model:** Alienware 17 R4  
**Regulatory Model:** P31E  
**Regulatory Type:** P31E001

A L I E N W A R E™ 

# Notes, cautions, and warnings

---

 **NOTE:** A NOTE indicates important information that helps you make better use of your product.

 **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

 **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

---

**Copyright © 2016 Dell Inc. or its subsidiaries. All rights reserved.** Dell, EMC, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.

2016 - 11

Rev. A01

# Contents

- Set up your computer..... 5**
  - Setting up the Virtual Reality (VR) headset — optional..... 5
    - HTC Vive.....5
    - Oculus Rift.....6
    - Oculus Rift with touch..... 7
  - Alienware Graphics Amplifier..... 10
  
- Views..... 11**
  - Base..... 11
  - Display (with Tobii Aware)..... 11
  - Display (with Tobii Eye Tracker)..... 13
  - Back..... 14
  - Left..... 15
  - Right..... 16

<b>Specifications.....</b>	<b>17</b>
Dimensions and weight.....	17
System information.....	17
Memory.....	18
Ports and connectors.....	18
Communications.....	18
Audio.....	19
Storage.....	19
Keyboard.....	20
Camera.....	20
Touch pad.....	20
Battery.....	21
Video.....	21
Power adapter.....	22
Display.....	23
Computer environment.....	23
<b>Tobii Aware.....</b>	<b>25</b>
Features.....	25
Enabling or disabling Tobii Aware.....	25
<b>Keyboard shortcuts.....</b>	<b>26</b>
<b>Getting help and contacting Alienware.....</b>	<b>28</b>
Self-help resources.....	28
Contacting Alienware.....	29

# Set up your computer

---

Connect the power adapter and press the power button.



## Setting up the Virtual Reality (VR) headset — optional



**NOTE:** The VR headset is sold separately.



**NOTE:** If you are using **Alienware Graphics Amplifier** with your computer, see [Alienware Graphics Amplifier](#).

### HTC Vive


- 1 Download and run the setup tools for your VR headset at [www.dell.com/VRsupport](http://www.dell.com/VRsupport).
- 2 Connect the HDMI cable of the HTC Vive headset to the back of your computer.

- 3 Connect the USB cable from the Vive hub to the USB 3.0 port at the right side of your computer.
- 4 Follow the instructions on the screen to complete the setup.

## Oculus Rift

 **NOTE: The USB dongles are only shipped with computers that are Oculus certified.**

- 1 Download and run the setup tools for your VR headset at [www.dell.com/VRsupport](http://www.dell.com/VRsupport).
- 2 Connect the HDMI cable of the Oculus Rift headset to the back of your computer.

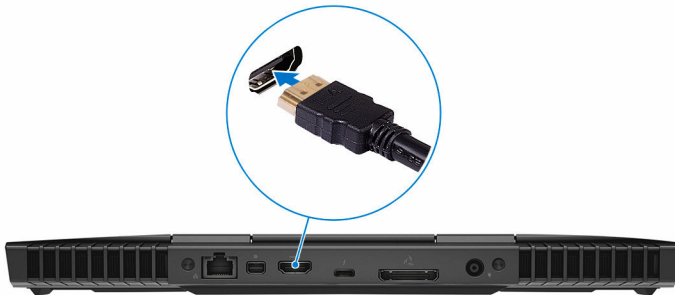

- 3 Connect the Oculus Rift headset to the USB Type-A port at the right side of your computer.
- 4 Connect the Oculus Rift tracker to the USB Type-A port at the left side of your computer.

- 5 Connect a USB Type-C to Type-A dongle to the Thunderbolt 3 (USB Type-C) port at the back of your computer.



- 6 Connect the XBOX controller to the USB Type-A port on the USB dongle.



- 7 Follow the instructions on the screen to complete the setup.

## Oculus Rift with touch


 **NOTE: The USB dongles are only shipped with computers that are Oculus certified.**

- 1 Download and run the setup tools for your VR headset at [www.dell.com/VRsupport](http://www.dell.com/VRsupport).

- 2 Connect the HDMI cable of the Oculus Rift headset to the back of your computer.



- 3 Connect the Oculus Rift headset to the USB Type-A port at the right side of your computer.

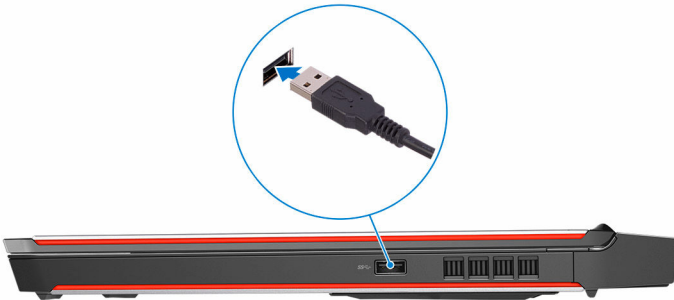


- 4 Connect a USB Type-C to Type-A dongle to the Thunderbolt 3 (USB Type-C) port on the back of your computer.






- 5 Connect the Oculus Rift tracker to the USB Type-A port at the left side of your computer.

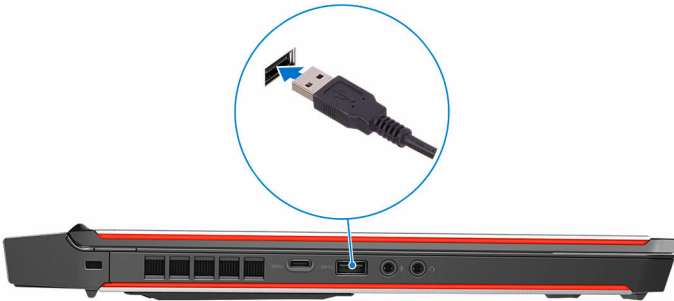

- 6 Connect a USB Type-C to Type-A dongle to the USB 3.0 (Type-C) port at the left side of your computer.

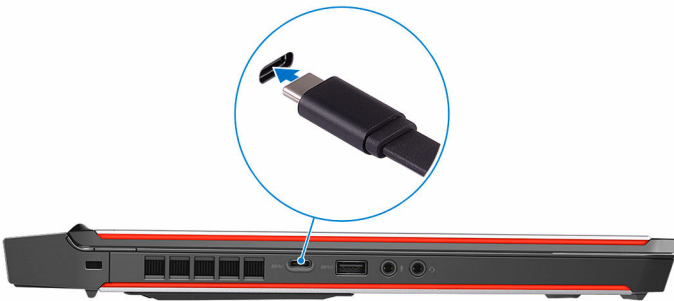

- 7 Connect the XBOX controller to the USB Type-A port on the USB dongle.



- 8 Connect the Oculus Rift tracker for Touch to the USB Type-A port on the dongle.
- 9 Follow the instructions on the screen to complete the setup.

# Alienware Graphics Amplifier

Alienware Graphics Amplifier enables you to connect an external graphics card to your computer.

When using the Virtual Reality (VR) headset, connect the HDMI cable to the graphics card installed on your Alienware Graphics Amplifier. The USB cables from the VR headset can be connected either to your computer or your Alienware Graphics Amplifier.



**NOTE: The USB dongle is not required, if you are connecting the USB 3.0 cables on your VR headset to the USB 3.0 Type-A port on your Alienware Graphics Amplifier.**

For more information about Alienware Graphics Amplifier, see *Alienware Graphics Amplifier User's Guide* at <http://www.dell.com/support>.

# Views

---

## Base



### 1 Power button (Alienhead)

Press to turn on the computer if it is turned off, in sleep state, or in hibernate state.

Press to put the computer in sleep state if it is turned on.

Press and hold for 4 seconds to force shut-down the computer.



**NOTE: You can customize the power-button behavior in Power Options.**

### 2 Macro keys

Run pre-defined Macros.

Define the macro keys using the Alienware Command Center.

## Display (with Tobii Aware)



**1 Left microphone**

Provides digital sound input for audio recording and voice calls.

**2 Infrared emitter**

Emits infrared light, which enables the infrared camera to sense depth and track motion.



**NOTE: The infrared emitter blinks to detect the user's presence. To stop the emitter from blinking, turn off the Tobii Aware. For more information about the Tobii Aware, see [Tobii Aware](#).**

**3 Infrared camera**

Depth-sensing feature of the camera enhances security when paired with Windows Hello face authentication.

**4 Camera**

Enables you to video chat, capture photos, and record videos.

**5 Camera-status light**

Turns on when the camera is in use.


**6 Right microphone**

Provides digital sound input for audio recording and voice calls.

## 7 **Service Tag label**

The Service Tag is a unique alphanumeric identifier that enables Dell service technicians to identify the hardware components in your computer and access warranty information.

## Display (with Tobii Eye Tracker)

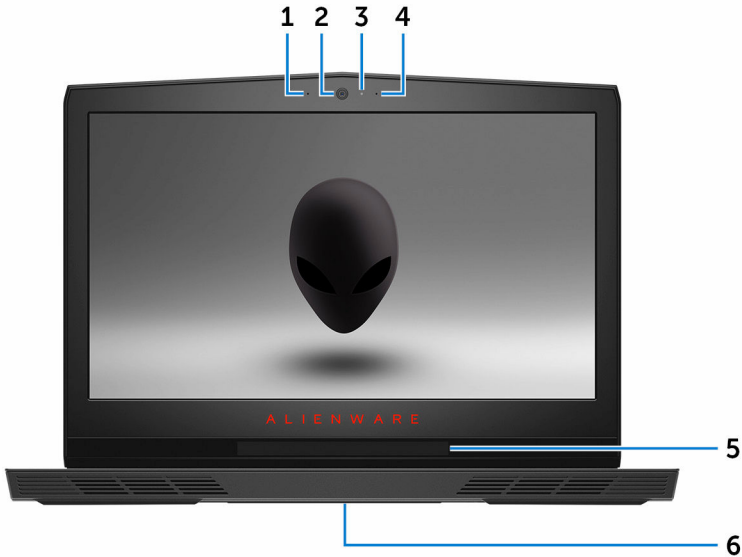

### 1 **Left microphone**

Provides digital sound input for audio recording and voice calls.

### 2 **Camera**

Enables you to video chat, capture photos, and record videos.

### 3 **Camera-status light**

Turns on when the camera is in use.

### 4 **Right microphone**

Provides digital sound input for audio recording and voice calls.


### 5 **Tobii Eye Tracker**

Application that enables you to interact with your computer using your eyes.

## 6 Service Tag label

The Service Tag is a unique alphanumeric identifier that enables Dell service technicians to identify the hardware components in your computer and access warranty information.

# Back

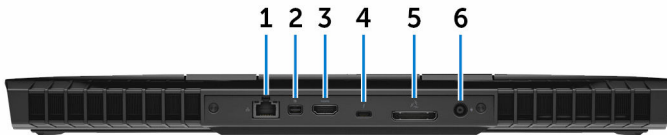

### 1 Network port (with lights)

Connect an Ethernet (RJ45) cable from a router or a broadband modem for network or internet access.

The two lights next to the connector indicate the connectivity status and network activity.

### 2 Mini DisplayPort

Connect a TV or another DisplayPort-in enabled device. Provides video and audio output.

### 3 HDMI port

Connect a TV or another HDMI-in enabled device. Provides video and audio output.

### 4 Thunderbolt 3 (USB Type-C) port

Supports USB 3.1 Gen 2, DisplayPort 1.2, Thunderbolt 3 and also enables you to connect to an external display using a display adapter.

Provides data transfer rates up to 10 Gbps for USB 3.1 Gen 2 and up to 40 Gbps for Thunderbolt 3.


### 5 External graphics port

Connect an Alienware Graphics Amplifier to enhance the graphics performance.

### 6 Power-adaptor port

Connect a power adapter to provide power to your computer and charge the battery.

# Left

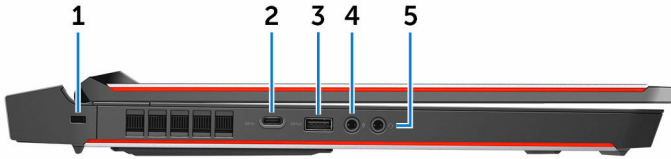


## 1 Security-cable slot (for Noble locks)

Connect a security cable to prevent unauthorized movement of your computer.

## 2 USB 3.0 (Type-C) port

Connect peripherals such as external storage devices, printers, and external displays.


Provides data transfer speeds up to 5 Gbps. Supports Power Delivery that enables power supply to devices. Provides up to 15 W power output that enables faster charging.

 **NOTE: Adapters (sold separately) are required to connect standard USB and DisplayPort devices.**

## 3 USB 3.0 port with PowerShare

Connect peripherals such as storage devices and printers.

Provides data transfer speeds up to 5 Gbps. PowerShare enables you to charge your USB devices even when your computer is turned off.

 **NOTE: If the charge on your computer's battery is less than 10 percent, you must connect the power adapter to charge your computer, and USB devices connected to the PowerShare port.**

 **NOTE: If a USB device is connected to the PowerShare port before the computer is turned off or in hibernate state, you must disconnect and connect it again to enable charging.**


## 4 Microphone/headphone port (configurable)

Connect an external microphone for sound input or a headphone for sound output.

## 5 Headset port

Connect a headphone or a headset (headphone and microphone combo).

## Right

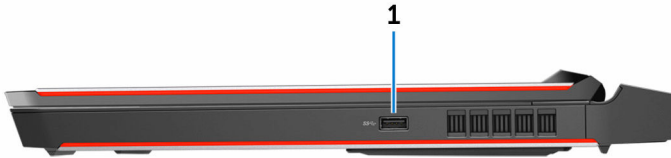

### 1 **USB 3.0 port**

Connect peripherals such as storage devices and printers. Provides data transfer speeds up to 5 Gbps.



# Specifications

---

## Dimensions and weight

**Table 1. Dimensions and weight**

Height	29.99 mm (1.18 in)
Width	424 mm (16.69 in)
Depth	332 mm (13.07 in)
Weight	4.42 kg (9.74 lb)



**NOTE: The weight of your computer varies depending on the configuration ordered and the manufacturing variability.**

## System information

**Table 2. System information**

Computer model	Alienware 17 R4
Processor	<ul style="list-style-type: none"><li>6<sup>th</sup> generation Intel Core i7/i7k</li><li>7<sup>th</sup> generation Intel Core i7/i7k</li></ul>



**NOTE: If your computer is shipped with an Intel Core i7k processor, you can overclock the processing speed beyond the standard specifications.**

Chipset	<ul style="list-style-type: none"><li>Intel CM236</li><li>Intel CM238</li></ul>
---------	---

# Memory

**Table 3. Memory specifications**

Slots	Two SODIMM slots
Type	DDR4
Speed	2133 MHz, 2400 MHz, and 2667 MHz
Configurations supported	8 GB, 16 GB, and 32 GB

# Ports and connectors

**Table 4. Ports and connectors**

Network	One RJ-45 port
USB	<ul style="list-style-type: none"><li>▪ One USB 3.0 port</li><li>▪ One USB 3.0 port with PowerShare</li><li>▪ One USB 3.0 (Type-C) port</li><li>▪ Thunderbolt 3 (USB Type-C) port</li></ul>
Audio/Video	<ul style="list-style-type: none"><li>▪ One HDMI port</li><li>▪ One microphone/headphone port (configurable)</li><li>▪ One headset port</li><li>▪ One Mini DisplayPort</li><li>▪ One external graphics port</li></ul>

# Communications

**Table 5. Communications specifications**

Ethernet	10/100/1000 Mbps Ethernet controller integrated on system board
Wireless	<ul style="list-style-type: none"><li>▪ Wi-Fi 802.11ac</li><li>▪ Bluetooth 4.1</li></ul>

- Miracast

## Audio

**Table 6. Audio specifications**

Controller	Realtek ALC 3266
Speakers	Stereo
Speaker output	<ul style="list-style-type: none"><li>▪ Average: 4 W</li><li>▪ Peak: 5 W</li></ul>
Subwoofer output	<ul style="list-style-type: none"><li>▪ Average: 2 W</li><li>▪ Peak: 2.5 W</li></ul>
Microphone	Digital-array microphones
Volume controls	Media-control shortcut keys

## Storage


**Table 7. Storage specifications**

Interface	<ul style="list-style-type: none"><li>▪ SATA 6 Gbps</li><li>▪ PCIe up to 32 Gbps</li></ul>
Hard drive	One 2.5-inch drive
Solid-state drive (SSD)	<ul style="list-style-type: none"><li>▪ Two full-size M.2 PCIe/SATA drives</li><li>▪ One half-size M.2 PCIe/SATA drive</li></ul>

# Keyboard

**Table 8. Keyboard specifications**

Type	Backlit keyboard
Shortcut keys	Some keys on your keyboard have two symbols on them. These keys can be used to type alternate characters or to perform secondary functions. To type the alternate character, press Shift and the desired key. To perform secondary functions, press Fn and the desired key.

 **NOTE: You can define the primary behavior of the function keys (F1–F12) by changing Function Key Behavior in BIOS setup program.**

[Keyboard shortcuts](#)

# Camera

**Table 9. Camera specifications**

Resolution	<ul style="list-style-type: none"><li>• Still image: 2.07 megapixels</li><li>• Video: 1920 x 1080 (Full HD) at 30 fps (maximum)</li></ul>
Diagonal viewing angle	74 degrees

# Touch pad

**Table 10. Touch pad specifications**

Resolution	<ul style="list-style-type: none"><li>• Horizontal: 1727</li><li>• Vertical: 1092</li></ul>
Dimensions	<ul style="list-style-type: none"><li>• Height: 56 mm (2.20 in)</li></ul>

- Width: 100 mm (3.94 in)

## Battery

**Table 11. Battery specifications**

Type	4-cell "smart" lithium-ion (68 WHr)	6-cell "smart" lithium-ion (99 WHr)
Weight (maximum)	0.32 kg (0.71 lb)	0.42 kg (0.93 lb)
Voltage	15.20 VDC	11.40 VDC
Life span (approximate)	300 discharge/charge cycles	
Temperature range: Operating	0°C to 35°C (32°F to 95°F)	
Temperature range: Storage	-20°C to 60°C (-4°F to 140°F)	
Coin-cell battery	CR-2032	
Dimensions:		
Height	13.50 mm (0.53 in)	
Width	89.20 mm (3.51 in)	
Depth	259.60 mm (10.22 in)	
Operating time	Varies depending on operating conditions and can significantly reduce under certain power-intensive conditions.	

## Video

**Table 12. Video specifications**

	Integrated	Discrete
Controller	<ul style="list-style-type: none"> <li>▪ Intel HD Graphics 530</li> <li>▪ Intel HD Graphics 630</li> </ul>	<ul style="list-style-type: none"> <li>▪ AMD Radeon RX 470</li> <li>▪ NVIDIA GeForce GTX 1060</li> <li>▪ NVIDIA GeForce GTX 1070</li> </ul>

	Integrated	Discrete
Memory	Shared system memory	<ul style="list-style-type: none"> <li>▪ NVIDIA GeForce GTX 1080</li> <li>▪ 6 GB GDDR5</li> <li>▪ 8 GB GDDR5</li> <li>▪ 8 GB GDDR5X</li> </ul>

## Power adapter

**Table 13. Power adapter specifications**

Type	180 W	240 W	330 W
Input voltage	100 VAC–240 VAC	100 VAC–240 VAC	100 VAC–240 VAC
Input frequency	50 Hz–60 Hz	50 Hz–60 Hz	50 Hz–60 Hz
Input current (maximum)	2.34 A/2.50 A	3.50 A	4.40 A
Output current (continuous)	9.23 A	12.30 A	16.92 A
Rated output voltage	19.50 VDC	19.50 VDC	19.50 VDC
Temperature range: Operating	0°C to 40°C (32°F to 104°F)	0°C to 40°C (32°F to 104°F)	0°C to 40°C (32°F to 104°F)
Temperature range: Storage	–40°C to 70°C (–40°F to 158°F)	–40°C to 70°C (–40°F to 158°F)	–40°C to 70°C (–40°F to 158°F)

# Display

**Table 14. Display specifications**

Type	17.3-inch FHD (optional Tobii Eye-tracking)	17.3-inch QHD (with Tobii Eye-tracking)	17.3-inch UHD (with Tobii Eye-tracking)
Resolution (maximum)	1920 x 1080	2560 x 1440	3840 x 2160
Viewing angle (Left/Right/Up/Down)	89/89/89/89 degrees	70/70/60/60 degrees	89/89/89/89 degrees
Pixel pitch	0.1989 mm	0.14925 mm	0.0995 mm
Height (excluding bezel)	214.81 mm (8.46 in)	214.92 mm (8.46 in)	214.94 mm (8.46 in)
Width (excluding bezel)	381.89 mm (15.04 in)	382.08 mm (15.04 in)	382.12 mm (15.04 in)
Diagonal (excluding bezel)	439.42 mm (17.30 in)	439.42 mm (17.30 in)	439.42 mm (17.30 in)
Refresh rate	60 Hz	120 Hz	60 Hz
Controls	Brightness can be controlled using shortcut keys		

# Computer environment

**Airborne contaminant level:** G2 or lower as defined by ISA-S71.04-1985

**Table 15. Computer environment**

	Operating	Storage
Temperature range	5°C to 35°C (41°F to 95°F)	-40°C to 65°C (-40°F to 149°F)
Relative humidity (maximum)	10% to 90% (non-condensing)	0% to 95% (non-condensing)
Vibration (maximum)	0.26 GRMS	1.37 GRMS

	<b>Operating</b>	<b>Storage</b>
Shock (maximum)*	40 G for 2 ms with a change in velocity of 20 in/s (51 cm/s) <sup>†</sup>	105 G for 2 ms with a change in velocity of 52.5 in/s (133 cm/s) <sup>‡</sup>
Altitude (maximum)	-15.20 m to 3048 m (-50 ft to 10,000 ft)	-15.20 m to 10,668 m (-50 ft to 35,000 ft)

\* Measured using a random vibration spectrum that simulates user environment.

† Measured using a 2 ms half-sine pulse when the hard drive is in use.

‡ Measured using a 2 ms half-sine pulse when the hard-drive head is in parked position.



# Tobii Aware

---

Tobii Aware application enables the infrared sensors on your computer to manage power, security, and Alien FX lighting.

## Features

The following table shows the features of Tobii Aware.

**Table 16. Features**

Dim brightness	Reduces screen brightness when you are not in front of it.
Turn off screen	Turns off the screen when you are not in front of it.
Sleep mode	Sends your computer to sleep before Windows power plan when you are not in front of the screen.
Turn off lights	Turns off the computer lights when you are not in front of the screen.
Windows Hello	Enables you to login to your computer without the login id or password when paired with Windows Hello face authentication.
Alien FX lighting	Enables Alien FX lighting feature when you are in front of your screen.

## Enabling or disabling Tobii Aware

- 1 Select the Eye detection indicator on the activity field in Windows.
- 2 Toggle the On/Off switch located on the top. Default: On
- 3 Save the settings and exit.

# Keyboard shortcuts

Table 17. List of keyboard shortcuts















Keys	Description
	Disconnect Alienware Graphics Amplifier
	Disable/enable wireless
	Mute audio
	Decrease volume
	Increase volume
	Toggle integrated/discrete graphics
	Switch to external display
	Decrease brightness
	Increase brightness
	Disable/enable touch pad
	Disable/enable AlienFX

Table 18. List of Macro keys

Keys	Description
	Macro keys
	

 **NOTE: You can configure modes and assign multiple tasks for the macro keys on the keyboard.**

Keys	Description
$\sqrt{3}$	
$\sqrt{4}$	
$\sqrt{5}$	
$\sqrt{6}$	
$\sqrt{7}$	
$\sqrt{8}$	
$\sqrt{9}$	
$\sqrt{x}$	

# Getting help and contacting Alienware

---

## Self-help resources

You can get information and help on Alienware products and services using these online self-help resources:

**Table 19. Alienware products and online self-help resources**

Information about Alienware products and services [www.alienware.com](http://www.alienware.com)

Dell Help & Support app



Get started app

Get started app



Accessing help

In Windows search, type **Help and Support**, and press **Enter**.

Online help for operating system

[www.dell.com/support/windows](http://www.dell.com/support/windows)  
[www.dell.com/support/linux](http://www.dell.com/support/linux)

Troubleshooting information, user manuals, setup instructions, product specifications, technical help blogs, drivers, software updates, and so on

[www.alienware.com/gamingservices](http://www.alienware.com/gamingservices)

VR Support

[www.dell.com/VRsupport](http://www.dell.com/VRsupport)

Videos providing step-by-step instructions to service your computer

[www.youtube.com/alienwareservices](http://www.youtube.com/alienwareservices)

# Contacting Alienware

To contact Alienware for sales, technical support, or customer service issues, see [www.alienware.com](http://www.alienware.com).



**NOTE: Availability varies by country and product, and some services may not be available in your country.**



**NOTE: If you do not have an active internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.**